

Soft LVP



Soft

Available Size 7"x48" Plank




7x48 Gris



7x48 Taupe

12 Mil Wear Layer
4 MM SPC Core
1 MM IXPE

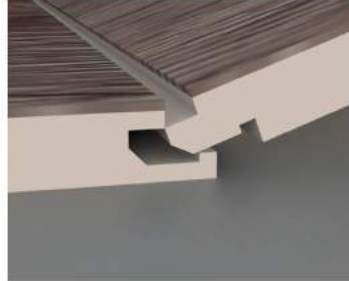


2G

The system is preferably combined with fold-down on the short side for fastest and easiest installation, installing at an angle.

- Angling installation method.
- Compatible for all materials.
- Locking profile for both sides of the panel.
- For thicknesses down to 3 mm.


El sistema se combina preferiblemente por el lado corto para una instalación más rápida y fácil, instalándose en ángulo.

- Método de instalación en ángulo.
- Compatible para todos los materiales.
- Perfil de bloqueo para ambos lados del panel.
- Para espesores menores de 3 mm.

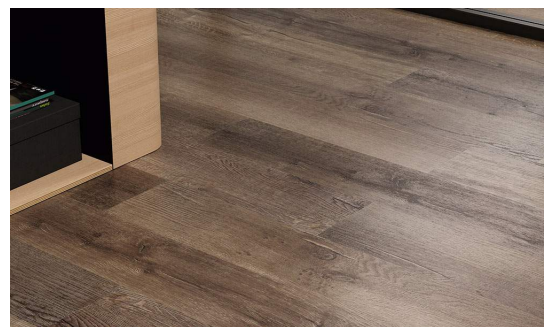


Installation Guide

EASY CLICK INSTALLATION

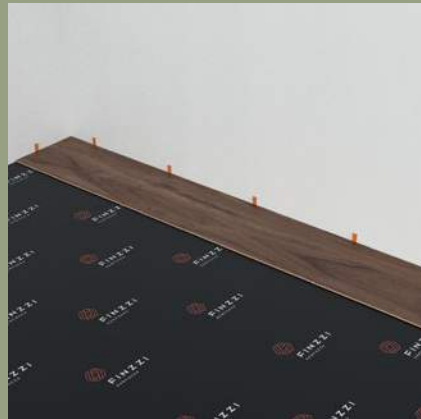


Step 1: First plank, first row. Place a spacer of 3/8" (9,525mm) thickness to the left and position the plank against the wall.

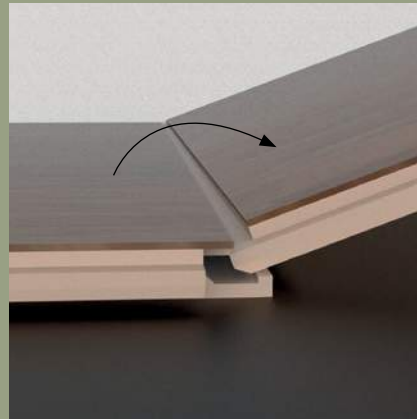

Step 2: Second plank, first row. Place this plank gently and tight to the short end of the first one.



Step 3: Fold the panel down in a single action movement. Afterwards press down or slightly tap down at the short end just installed till it clicks.

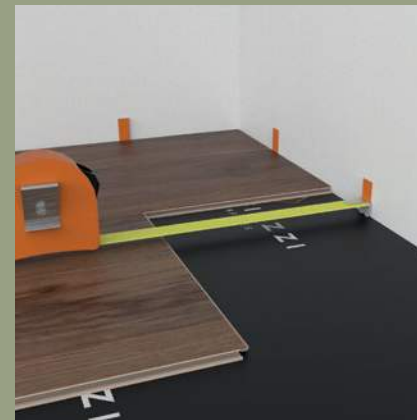


Step 4: At the end of the first row, put a spacer 3/8" (9,525mm) to the wall and measure the length of the last plank to fit.



Step 5: Cut with a jig saw, hand saw, chop saw or guillotine cutter. Then snap the flooring - similar to scoring and snapping drywall.



Step 6: Starting the second row the first plank should be a min length of 10" (254mm). Put a 3/8" (9,525mm) spacer against the wall and measure the last piece. If it is shorter than 10" (254mm) a new starter piece should be used. Insert at an angle into the previous row and tap (on the long side) it in using a tapping block till flat.

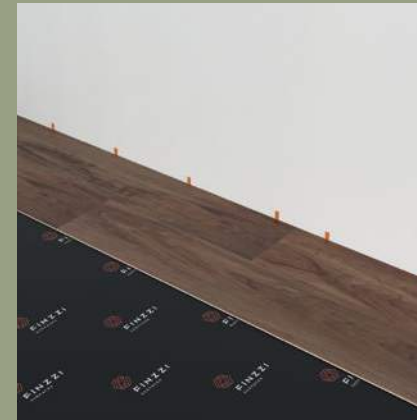


Step 7: Minimum distance between short ends of planks in parallel rows should not be less than 6" (152,4cm).




Step 8a: Second plank, second row. Place the panel at an angle into the groove of the previous row making sure that the end of the panel is tight/flush to the short end of the previous panel.



Step 8b: Fold the panel down in a single action movement with a slight press to the left to the short end of the previous panel. Again, using the tapping block tap against the long end into the previous row.

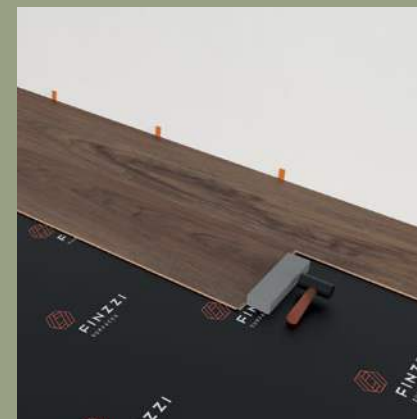

Step 8c: The product is properly locked when the two boards are flush across the top. Finish installing this plank tapping it with a tapping block on the long side to ensure secure installation.

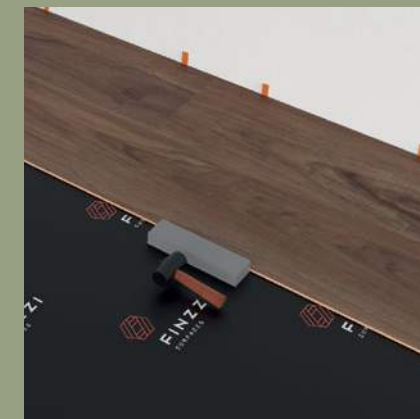

Step 9: After 2-3 rows. Adjust the distance to the front wall by placing spacers 3/8" (9,525mm) on the side walls and the end wall. Once the adjustment is done against the main wall, continue to install till the last row.



Step 10: Last row. The Minimum width of the last plank should be NOT LESS than 2" wide. Put a spacer before measuring Cut the panels lengthwise and glue the short ends.