

Chester LVP



Chester

Available Size 7"x48" Plank



7x48 Cotto



7x48 Crema



7x48 Hazel



7x48 Silver

20 Mil Wear Layer

4.5 MM SPC Core

1.5 MM IXPE




Reducer Molding - 8' Length



T Molding - 8' Length



Stair Nosing - 8' Length

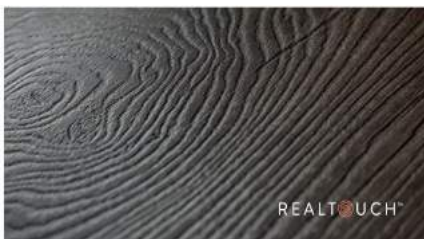

Real Touch[®]

Real Touch[®] matches the texture of the decor papers' underlying pattern, enables the colour and surface to match at 100% and create the realism of a genuine wood.

El acabado Real Touch[®] ofrece una superficie donde la textura de la capa superior imita a la perfección el diseño de lo que sería una pieza de madera real. Al tacto podemos observar un alto nivel de realismo.



Drop&Click[®], 5GI Valinge

The own design of the piece allows that only with pressing one piece on the other, the tabs are united staying in the blocking position.

- Push down installation
- For LVT and WPC.
- 30% stronger than other one-piece solutions.


El propio diseño de la pieza permite que solo con presionar una pieza sobre la otra, las pestañas se unen quedándose en la posición de bloqueo.

- Sistema de instalación push.
- Para LVT y WPC.
- 30% más fuerte que otras opciones.




Installation Guide


EASY CLICK INSTALLATION

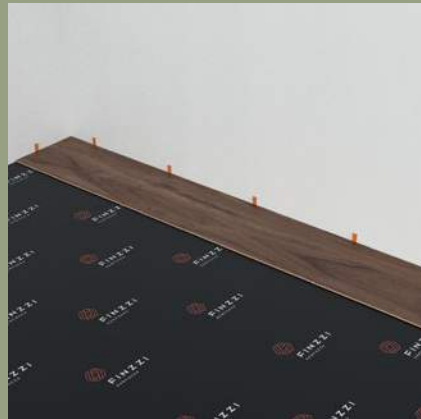

Step 1: First plank, first row. Place a spacer of 3/8" (9,525mm) thickness to the left and position the plank against the wall.

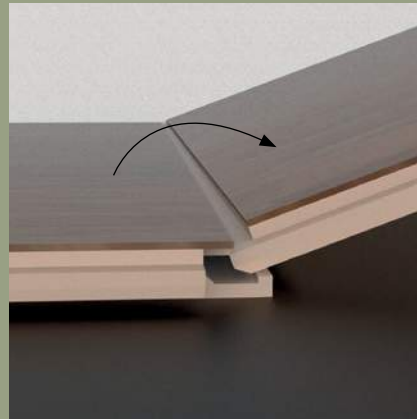

Step 2: Second plank, first row. Place this plank gently and tight to the short end of the first one.

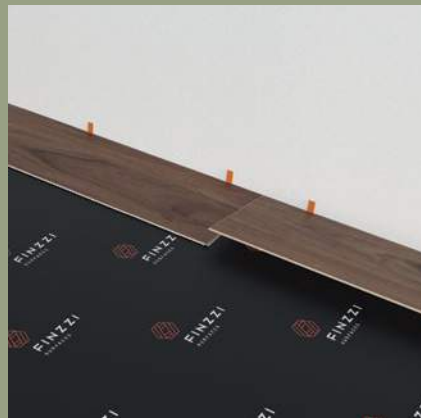

Step 3: Fold the panel down in a single action movement. Afterwards press down or slightly tap down at the short end just installed till it clicks.




Step 4: At the end of the first row, put a spacer 3/8" (9,525mm) to the wall and measure the length of the last plank to fit.



Step 5: Cut with a jig saw, hand saw, chop saw or guillotine cutter. Then snap the flooring - similar to scoring and snapping drywall.



Step 6: Starting the second row the first plank should be a min length of 10" (254mm). Put a 3/8" (9,525mm) spacer against the wall and measure the last piece. If it is shorter than 10" (254mm) a new starter piece should be used. Insert at an angle into the previous row and tap (on the long side) it in using a tapping block till flat.

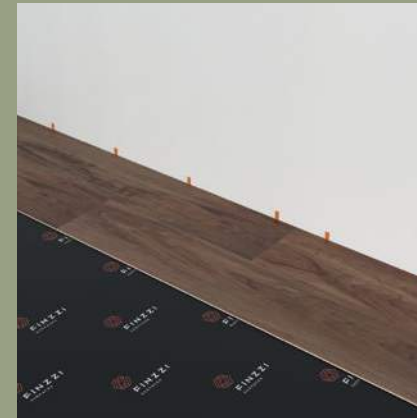

Step 7: Minimum distance between short ends of planks in parallel rows should not be less than 6" (152,4cm).




Step 8a: Second plank, second row. Place the panel at an angle into the groove of the previous row making sure that the end of the panel is tight/flush to the short end of the previous panel.



Step 8b: Fold the panel down in a single action movement with a slight press to the left to the short end of the previous panel. Again, using the tapping block tap against the long end into the previous row.



Step 8c: The product is properly locked when the two boards are flush across the top. Finish installing this plank tapping it with a tapping block on the long side to ensure secure installation.

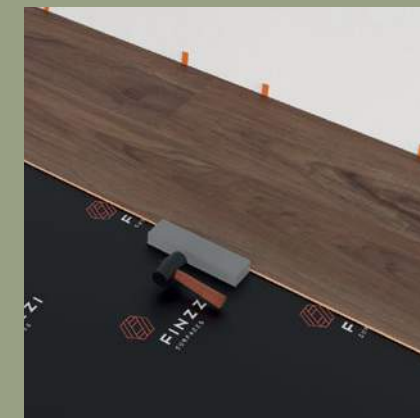

Step 9: After 2-3 rows. Adjust the distance to the front wall by placing spacers 3/8" (9,525mm) on the side walls and the end wall. Once the adjustment is done against the main wall, continue to install till the last row.



Step 10: Last row. The Minimum width of the last plank should be NOT LESS than 2" wide. Put a spacer before measuring Cut the panels lengthwise and glue the short ends.